



OPC High Rise Footrest

Components

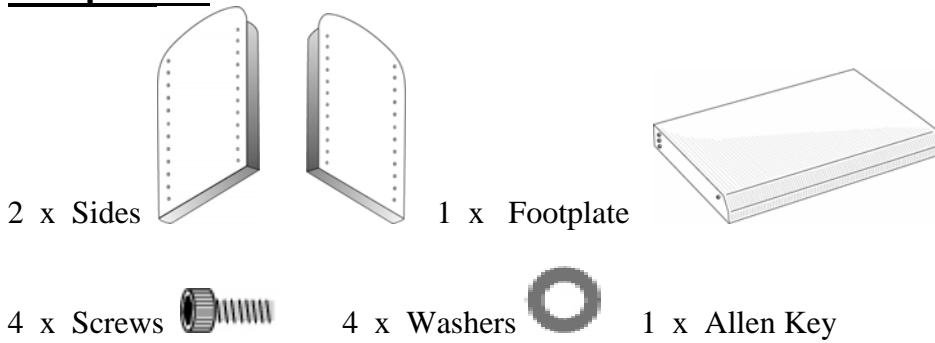


Assembly Instructions: The OPC High Rise Footrest is assembled by attaching the two sides to carpet covered footplate.

1. Work out the height of the footplate you require.
2. Attach one side to the footplate loosely using the screws and washers with the Allen Key provided. In attaching the front part of the footplate, you have the option of using one of the three holes. This allows you to choose the angle of the footplate. e.g. the middle hole will give you a flat footplate. Once you have the side attached to the footplate with both screws, tighten them with the Allen Key

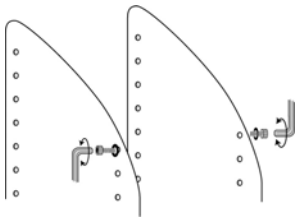

3. Attach other side using the same method.

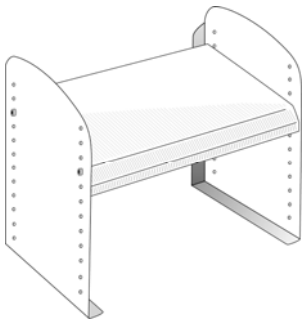

If you are having difficulty in assembling this heavy duty footrest, please contact the company who supplied the footrest.

